

## Product FAQ

### NO SPARKING

Q1. Why free standing cooker's burner is not sparking?

A1.1 Please check whether its power cable is connected to the power socket.



Q2. Why free standing cooker's oven is not working?

A2.1 Please check whether its power cable is connected to the power socket.



Q3. Where is the power cable of the free standing cooker?

A3.1 Generally it is behind of the free standing cooker.



*Note: If the matter as mentioned above still exist, please call to Service Centre for further assistance.*